




Magic Gadgets

MULTI LINE PHONE SIMULATOR INSTRUCTIONS


THESE RULES DO NOT APPLY TO PHONES WITH LED LAMPS AS THEY REQUIRE MUCH LESS POWER THAN PHONES WITH INCANDESCENT LAMPS.

RECOMMENDED CONNECTION:

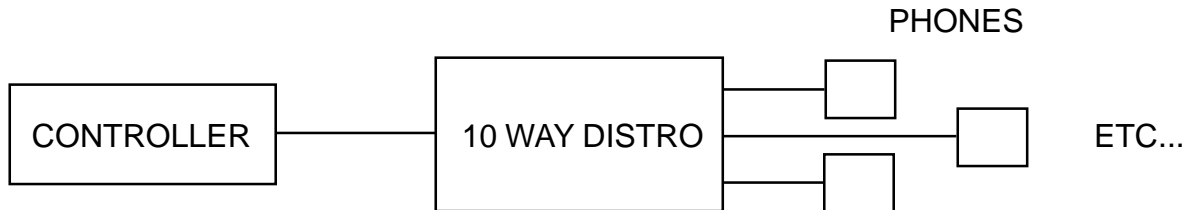


IN THE RECOMMENDED CONNECTION METHOD THE CONTROLLER IS CONNECTED TO THE 10 WAY DISTRO WHERE THE LINES ARE CONNECTED TO THE PHONES. THIS PROVIDES A STRONG SIGNAL TO ALL PHONES.

ALTERNATE CONNECTION:

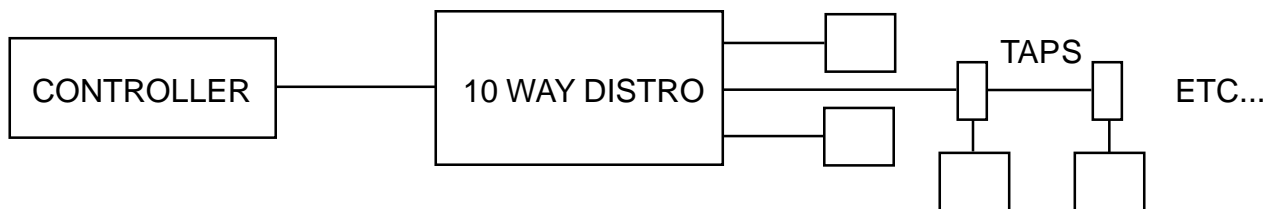

IN THE ALTERNATE CONNECTION METHOD THE CONTROLLER IS CONNECTED TO THE 10 WAY DISTRO WHICH CONNECTS TO MOST OF THE PHONES WITH A FEW DISTANT PHONES CONNECTED TO TAPS. TOO MANY TAPS WILL CAUSE THE SIGNAL TO WEAKEN. THIS CONDITION IS INDICATED BY LAMPS DIMMING AS OTHER LAMPS GO ON. IT WILL BE MOST NOTICEABLE AT THE MOST DISTANT PHONES.

NOT RECOMMENDED *EXCEPT WITH LED LAMPED PHONES:*

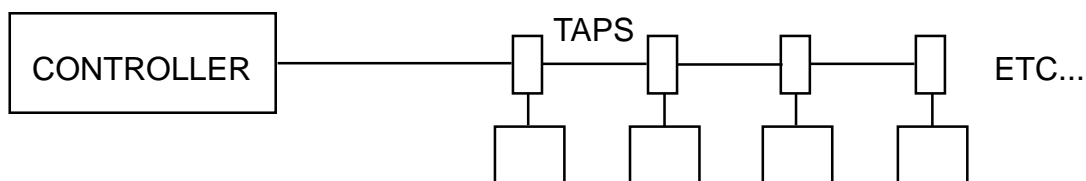

THIS CONNECTION METHOD WILL HAVE THE LEAST DESIRABLE RESULTS!