



# Magic Gadgets

## MINI TALK AND RING OPERATING INSTRUCTIONS

### CAUTION:

**NEVER CONNECT TELEPHONE EFFECTS EQUIPMENT TO REAL WORKING PHONE LINES! DAMAGE TO BOTH THE EFFECTS EQUIPMENT AND/OR THE PHONE SYSTEM CAN RESULT. HIGH VOLTAGE IS PRESENT AT THE REMOTE CONNECTOR DURING RINGING. DO NOT RING LONGER THAN 5 SECONDS CONTINUOUSLY.**

### RINGING:

CONNECT A WORKING TELEPHONE TO THE "REM" (REMOTE) CONNECTOR. THE PHONE MUST BE ON HOOK TO RING. PRESS RED PUSH-BUTTON TO RING THE PHONE. A PHONE DOES NOT HAVE TO BE CONNECTED TO THE LOCAL (UNMARKED) JACK FOR RINGING.

### RINGING AND TALKING:

CONNECT BOTH THE LOCAL AND REMOTE PHONES. WHEN THE RED PUSH-BUTTON IS PRESSED THE REMOTE PHONE WILL RING, THE LOCAL PHONE WILL NOT RING. BOTH PHONES MUST BE OFF HOOK AND RING BUTTON RELEASED TO TALK BETWEEN PHONES.

### COMPATIBILITY:

THIS DEVICE WILL WORK WITH OLDER MECHANICAL BELL TYPE PHONES AND THE LATEST ELECTRONIC ONES AS WELL AS SPEAKERPHONES, ANSWERING MACHINES, FAX, ETC. PHONE CONNECTORS ON THE UNIT ARE RJ-11 TYPE, WIRED SINGLE LINE (2 CONDUCTORS USED), RED AND GREEN ONLY. STANDARD LINE SPLITTERS, ADAPTERS, ETC. CAN BE USED TO INTERCONNECT THIS DEVICE. TO OVERCOME WIRE RESISTANCE OVER LONG RUNS, IT MAY BE NECESSARY TO USE HEAVIER CABLE SUCH AS 14 GA. LAMP CORD.

### TROUBLESHOOTING:

IF PHONE WILL NOT RING, MAKE SURE THE PHONE IS WORKING BY CONNECTING TO A WORKING PHONE SYSTEM. BATTERY LIFE IS LIMITED, USE ONLY FRESH ALKALINE BATTERY. IF RINGING (OR TALKING) SEEMS WEAK REPLACE BATTERY. THIS MAY BE NECESSARY IF LONG RINGING SESSIONS ARE REQUIRED.

